




Home  
Embedded Software

Development Tools  
J-Link ARM

Adapters  
5V adapter  
 JTAG 14 pin adapter  
DFPUs  
Flash breakpoints

Flash download  
Flash SDK  
GDB Server  
IDE integration  
Interface description

J-Flash ARM  
J-Link software  
J-Mem  
JTAG Isolator  
Model comparison

Non-commercial-use  
Performance comparison  
RDI  
SDK  
J-Link ARM Pro

J-Link ARM Lite  
J-Link Coldfire  
J-Trace ARM  
J-Trace for Cortex-M3

Production Tools

Evaluate our software!  
Downloads

Distributors  
Customers

Partners  
Sales

Forum  
About us

Head office Germany

Phone: +49-2103-2876-0  
Fax: +49-2103-2876-288  
E-mail: [info@segger.com](mailto:info@segger.com)  
[www.segger.com](http://www.segger.com)

US office

Phone: +1-978-874-0299  
Fax: +1-978-874-0599  
E-mail: [info@segger-us.com](mailto:info@segger-us.com)  
[www.segger-us.com](http://www.segger-us.com)



[Development Tools](#) [J-Link ARM](#) [Adapters](#) [JTAG 14 pin adapter](#)

## JTAG 14 pin adapter

An adapter is available to use J-Link ARM with targets using this 14 pin 0.1" mating JTAG connector.

**Pin Signal Pin no. on 20 pin JTAG**

1	VTrref	1
2	GND	GND
3	nTRST	3
4	GND	GND
5	TDI	5
6	GND	GND
7	TMS	7
8	GND	GND
9	TCK	9
10	GND	GND
11	TDO	13
12	RESET	15
13	VTrref	1
14	GND	GND



Mapping between the JTAG 14 pin adapter and 20 pin JTAG interface

[Pricing](#)

[Imprint](#) [Disclaimer](#) [Sitemap](#)

[back to top](#)

© 2009, www.segger.com, All rights reserved.